Flush Mount ECD\_ 1.2

# TECH LIGHTING

ENTRA CYLINDER

#### **GENERAL PRODUCT INFORMATION:**




This product is suitable for damp locations.

This product can be dimmed with a standard electronic dimmer or 0-10V dimmer.

This instruction shows a typical installation.

#### **SAVE THESE INSTRUCTIONS!**

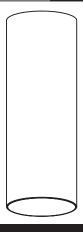


#### **CAUTION - RISK OF FIRE**

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


Use minimum 90°C supply conductors.

#### **Prepare the Junction Box**

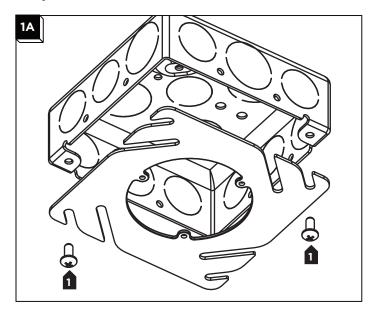


Prior to installing the drywall, attach the support plate to the junction box with the provided screws.

#### Install the Drywall

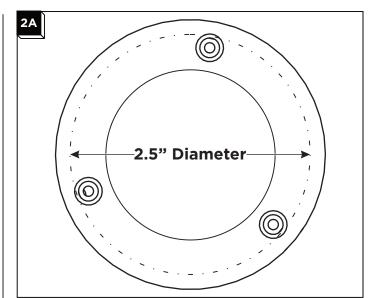


- 1 Install the drywall.
- 2 After installing the drywall, locate the j-box, there should be a slight protrusion in the area where it is located.
- Use the provided paper template and cut a 2.5" diameter hole. (Provided on the last page of this document.)

#### **Install the Template**

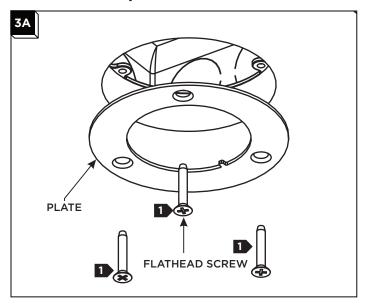


Use the three flathead screws to secure the plate to the previously installed J-box plate.

#### Wire the Fixture

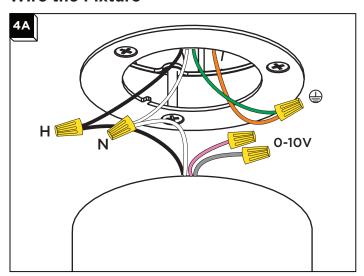


- 1 Use the following wiring diagram to wire your fixture.
- 2 Make sure to cap 0-10V dimming wires if not being used.

#### **Wiring Diagrams (Internal Drivers)**

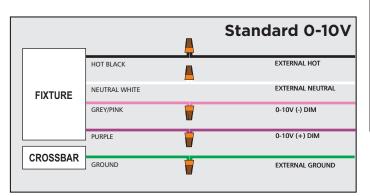


# Connect Power to the Housing (Remote Drivers)

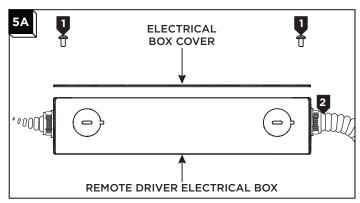


- Open remote driver junction box by removing 2 screws.
- Connect conduit or Romex to junction box with the proper fittings
- 3 Use the wiring diagrams to wire your fixture accordingly.

#### Wiring Diagrams (Remote Drivers)


WARNING: Do not connect red and blue wires from fixture to line voltage.

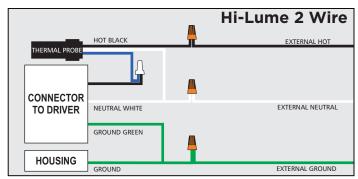


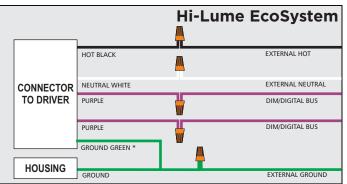


# Wiring Diagrams (Remote Drivers cont.)

# WARNING: Do not connect red and blue wires from fixture to line voltage.

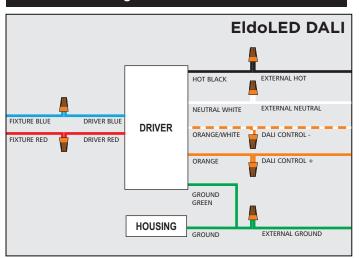

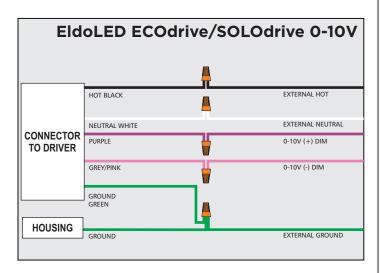


#### Install the Fixture

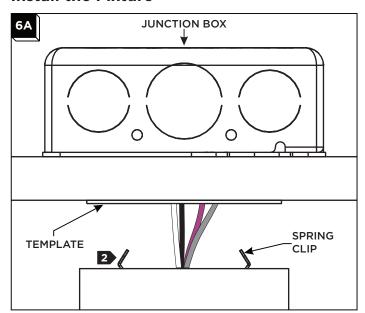

- Neatly place all wires and wire nut connections inside the junction box.
- 2 Align the Cylinder's spring clips with the template hole and push up until the Cylinder sits flush against the ceiling.


NOTE: It is recommended to use both hands and push up on the Cylinder firmly.

# **Rotate the Cylinder**

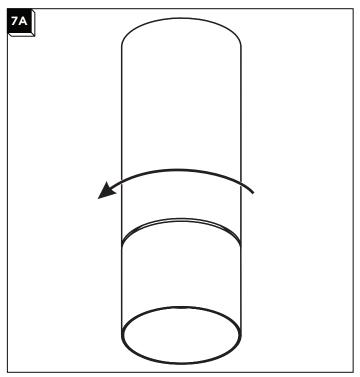


1 For the adjustable and wall wash fixture: the cylinder can rotate 358° to assist with aiming at the wall.

### Adjust the Angle (Adjustable only)

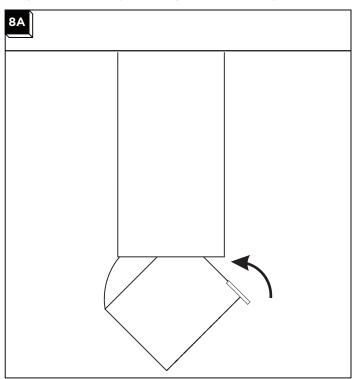


1 For the adjustable only: push up or pull down where the label is located to tilt the lower cylinder to the desired angle (0°-45°)


## **Install the Reflector Accessory**

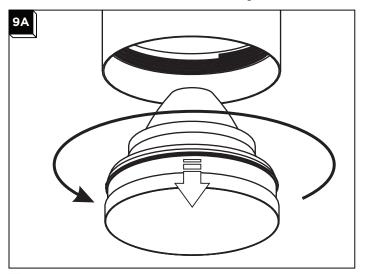

- Remove the reflector by gripping the interior of the reflector and rotate counter-clockwise.
- 2 Save the optic and discard the reflector.

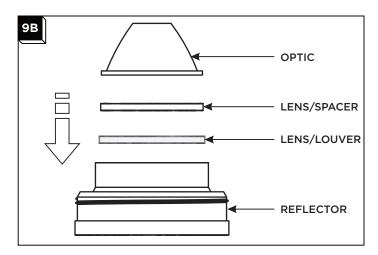

- 3 In the accessory reflector place the first lens or louver.
- If only using one lens then place the spacer, else place the second lens.
- 5 Then rest the optic on top of the second lens or spacer.

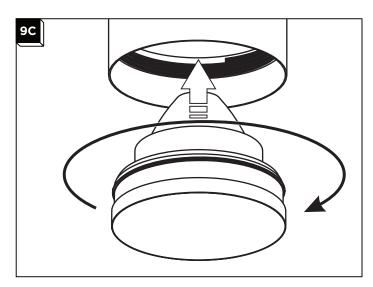


Install the reflector by inserting it into the bottom of the Cylinder and screw it in as far as it will go.

## **Notes:**

# **Notes:**

# **Template**

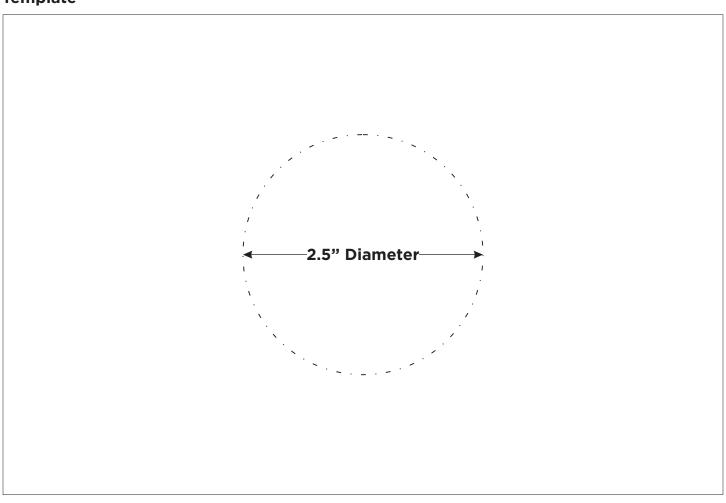

7400 Linder Ave., Skokie, IL 60077 T 847.410.4400 | F 847.410.4500 www.techlighting.com